


# C12PCB

Pre-construction board for JBL Conceal C62 and C86 (MF/HF panel)

JBL

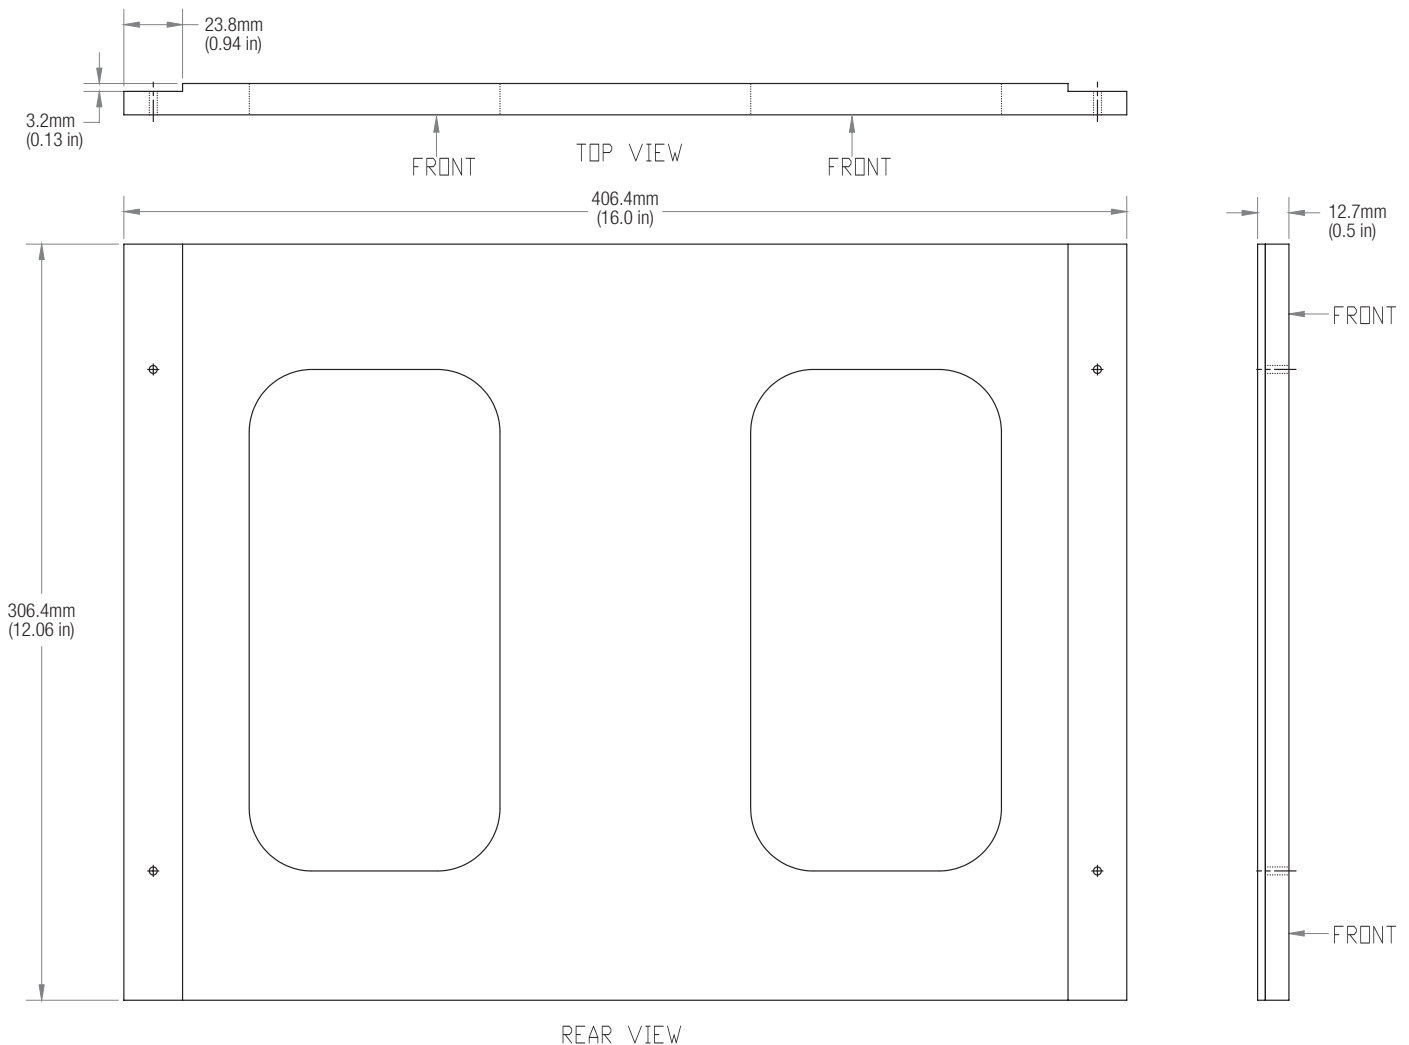

## Features:

- For temporary use as part of the installation process for the JBL Conceal Series of invisible speakers into new construction
- Designed to be installed during pre-wire and reserve the proper speaker openings as the wallboard is installed around them
- Specifically sized for JBL Conceal C62 and C86 (MF/HF panel)
- Prevents speakers from being exposed to the harsh construction environment
- Replaced with a speaker just before drywall seam finishing begins
- Reusable and should be saved after each project
- Packaged and sold in 6-packs

## Instructions:

- ▶ Install directly to the structural framing prior to the installation of wallboard
- ▶ Add additional framing so all four edges of the speaker panel can be securely attached
- ▶ Mount the PCB over the framing to reserve the proper speaker opening
- ▶ Install wallboard around all sides of the PCB
- ▶ Remove the PCB and follow speaker installation instructions